

# 72\_mhz\_Control



Remove pin for your channel and attach to your radio antenna.



Clip you AMA or CLUB card to that place.



PLEASE return you pin to the board before leaving the filed.

ACADEMY OF MODEL AERONAUTICS APPROVED FREQUENCY USE PLAN

EFFECTIVE JANUARY 1, 1991

Use of equipment operating on frequencies other than those listed below (or on 6 meters without proper licensing) is a violation of the AMA Safety Code.

72 MHz For Model Aircraft Use ONLY

Low Band

High Band

<u>Channel No.</u>	<u>Frequency</u>	<u>Channel No.</u>	<u>Frequency</u>
11	72.01	36	72.51
12	72.03	37	72.53
13	72.05	38	72.55
14	72.07	39	72.57
15	72.09	40	72.59
16	72.11	41	72.61
17	72.13	42	72.63
18	72.15	43	72.65
19	72.17	44	72.67
20	72.19	45	72.69
21	72.21	46	72.71
22	72.23	47	72.73
23	72.25	48	72.75
24	72.27	49	72.77
25	72.29	50	72.79
26	72.31	51	72.81
27	72.33	52	72.83
28	72.35	53	72.85
29	72.37	54	72.87
30	72.39	55	72.89
31	72.41	56	72.91
32	72.43	57	72.93
33	72.45	58	72.95
34	72.47	59	72.97
35	72.49	60	72.99